MIKONA

MHTMID-B1005DC

10.1 inch tablet

USER GUIDE

Safety Information 4
Safety Instructions 5
Features & Specifications 6
Supplied in the box 6
User Controls & Connections 7
Getting Started 8
Battery charging 8
Switching on for the first time 9
The Home Screen 10
Connecting to Wi-Fi 12
Sign In 13
Install the Store 13
Settings 14
WIRELESS & NETWORKS 14
DEVICE 15
PERSONAL 17
ACCOUNTS 18
SYSTEM 19
Installing Applications 20
Connecting to a PC 21
Basic Functions 22
Browse the internet 22
Listen to music 22
View photos 22
Watch a film 22
Troubleshooting 23

Safety Information

The exclamation point within an equilateral triangle is intend to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

This appliance complies with European Safety & Electrical Directives

Mains power adaptor supplied is a Class II appliance.
Only use the power adaptor supplied.

Correct disposal of this Product

Waste Electrical & Electronic Equipment (WEEE)

The crossed out wheelie bin is intended to show that this appliance must not be placed with ordinary household waste at the end of its useful life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please keep separate from other household waste and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where you purchased the product, or the local government office for details of where and how you can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product must not be mixed with other commercial wastes for disposal.

Do not open, or attempt to open, the casing: there are no user-serviceable parts inside. Failure to adhere to the instructions provided will invalidate the warranty.

This product features an internal Lithium Polymer battery, please treat with care.

This product depends on third-party technology and therefore no guarantee can be made regarding the compatibility of specific applications, software or accessories. Mikona take no responsibility for incompatibility of this product with any third-party products or software.

Android™, Google™, Gmail™ and Play Store™ are trademarks of Google Inc.

PLEASE NOTE
THIS PRODUCT FEATURES AN LCD SCREEN.
DO NOT BEND, TWIST OR SUBJECT THE PRODUCT TO ANY SHOCKS. THIS WILL CAUSE DAMAGE TO THE SCREEN.

PLEASE READ THE BELOW SAFETY INFORMATION,
FAILURE TO DO SO MAY RESULT IN DAMAGE TO YOUR PRODUCT.

NEVER leave your tablet in direct sunlight or in a hot vehicle or expose to heat.

NEVER use the tablet in a damp, humid or dusty environment. Do not expose to moisture or liquids.

NEVER allow the tablet to be subjected to heavy vibrations or shocks, especially the screen.

NEVER cross the road or drive whilst wearing headphones.

AVOID listening to excessively loud music or audio on headphones, this can permanently damage your hearing.

ALWAYS use the supplied charger or USB cable for charging the battery.

ALWAYS ensure the tablet is adequately ventilated to avoid overheating.

WARNING: This product features a Lithium Polymer battery. Improper charging or use may result in fire, personal injury and damage to property.

CAUTION: The tablet may become hot during use, especially during heavy use such as games, this is normal, however always ensure the tablet is adequately ventilated to avoid overheating.

Features & Specifications

- 10.1” Multipoint Touchscreen Display
- Screen Resolution: 1024 x 600 pixels
- CPU: Allwinner A23 Cortex Dual Core A7
- GPU: Mali400 3D Accelerator
- RAM: 1GB DDR3
- 8GB Internal Flash Memory
- Micro SD Card support (up to 32GB)
- Wi-Fi 802.11 b/g/n
- Accelerometer: 3-axis
- Front Camera: 0.3 Megapixel
- Rear Camera: 2.0 Megapixel
- Headphone Socket (3.5mm)
- Micro USB Socket
- Battery: Li-Polymer 3.7V 5000mA
- Video: AVI, MKV, MP4, MPG, FLV, 3GP, Xvid, Divx, WMV
- Audio: MP3, WMA, M4A, AAC, FLAC, APE, WAV
- Text: TXT, RTF, DOC, XLS, PPT, PDF
- Dimensions (mm): 257 x 153 x 10

Supplied in the box

- 10.1” touchscreen tablet
- Mains power adaptor
- USB cable
- User Guide
- Quick Start Guide

PLEASE NOTE
Your tablet screen is fitted with a protective film which may be removed by gently peeling from one of the corners. Do not use any sharp implements to remove the film as this may damage the screen.

User Controls & Connections

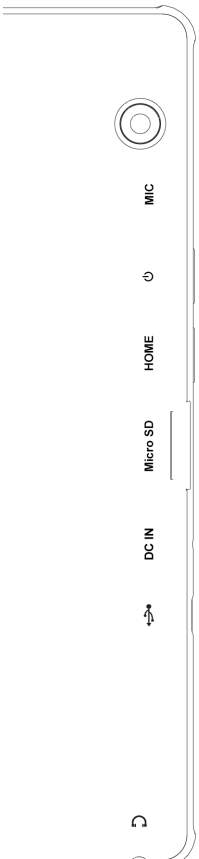

REAR CAMERA
2 megapixel, high quality camera

MIC
Integrated microphone.

⏻ POWER
Press and hold to switch On or Off.
Press momentarily to switch in/out of standby.

HOME
Press to return to Home Screen.

Micro SD
Insert Micro SD card to expand storage (up to 32GB)

DC IN
Connect supplied charger to charge battery.

USB (Micro)
For PC connection: transfer files or charge the battery.

HEADPHONES (3.5mm)
Insert headphone jack to listen, will cut off main speaker when connected.

FRONT CAMERA (on front)
0.3 megapixel, lower quality camera for video calling.

Battery charging

To charge your tablet connect the mains power adaptor to **DC IN**

Or connect **USB** to an available USB socket on your computer.

DC IN

Micro USB

Your tablet may be partially charged when first switched on, please fully charge as soon as possible to ensure you get the best from your battery.

Tip
Charging using the mains power adaptor may be much faster than charging via a computer USB socket.
Look after your battery: do not leave plugged in for long periods, regularly allow to discharge completely.

Switching on for the first time

To begin, press and hold the
⏻ power button

After a few seconds the screen will display the loading screen

Loading will take around a minute

Once loaded, follow the on-screen guide, please allow a few minutes for all installed applications to become accessible

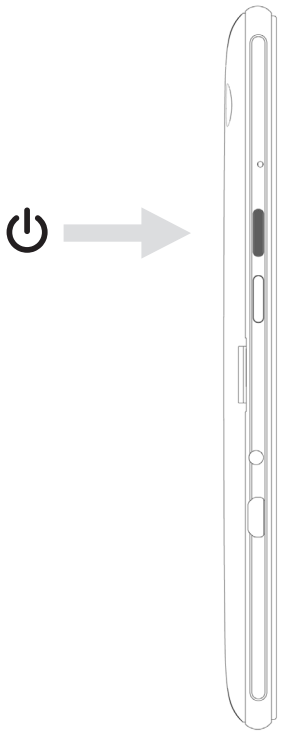

The screen will lock when switched off.
To unlock, swipe on the padlock

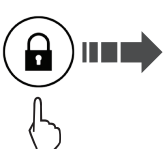

A quick press on the ⏻ **POWER** button switches the screen On and Off

A long press on the ⏻ **POWER** button switches the tablet On and Off

The Home Screen

RECENT
Display recently used apps

HOME
Press to return to Home screen

BACK
Press to return to previous screen or exit app

VOLUME DOWN

VOLUME UP

ALL APPS
Display all installed applications

The Home Screen

Your Home Screen is where you can place all your favourite apps, shortcuts and widgets.

All Apps
Press ⋯ to access all your currently installed apps and widgets.

To place an app or widget on your home screen press & hold the required app/widget - the app/widget will then transfer over to the home screen - move into place then release.

To remove an app or widget from the home screen, press and hold the app, then flick upwards or drag to the X (top left) to remove (this does not delete the application, just the Home Screen shortcut).

Notification Area
The Notification Area (top left) is used for displaying any notifications or actions.
Drag down the notification area to view and dismiss notifications

Battery Status
The Battery status is shown:

Battery Full

Battery Charging

Battery Empty

Connecting to Wi-Fi

Your tablet is supplied ready-to-use with several apps, however connecting to the internet and Play Store™ gives you access to thousands of apps and games, and also books, music and films.

To connect to the internet you will need access to a Wi-Fi broadband connection.

- Press Settings
- Press Wi-Fi
- Switch Wi-Fi **ON** by sliding switch
- Select appropriate Wi-Fi network
- Enter password
- Press Connect

The appropriate network should show Connected after a few seconds.

The Wi-Fi icon, next to battery, displays the current Wi-Fi strength and condition:

Connected, full signal

Connected, very low signal

Not connected or searching for signal

Try using the web browser app to access a web page to confirm you are connected. For any problems consult the troubleshooting guide on Page 23.

Sign In

Once you are connected to the internet you will need to sign in to your Google™ account, if you do not have a Google account you can always create one, it is free and easy.

- Press Settings
- Scroll down to Accounts
- Select + Add Account
- If you have a Gmail account select Existing
- If you do not have a Gmail account select Create
- Follow the on-screen instructions to login to or set up your account

Install the Store

Press on the **MARKET Store Install** icon on the Home Screen, this will install the **Play Store™** into All Apps.

Press to access All Apps, scroll left to Play Store app, press to open.

Settings

WIRELESS & NETWORKS

Wi-Fi

Available networks displayed. Press network name to connect, enter security password if required.

+ Manually add network, advanced details required, contact network administrator.
⋮ Options: Scan / WPS Pin Entry / Wi-Fi Direct / Advanced

Data Usage

Display the amount of data applications have used.

⋮ Options: Restrict background data / Auto-sync data / Mobile hotspots

More...

Advanced connection features.

Airplane mode: Disable WiFi and notifications for use during air travel.
Ethernet: Setup ethernet connection (USB LAN required)
VPN: Virtual Private Network set up, contact your network administrator for details.
Tethering & Portable Hotspot: For use with 3G.

DEVICE

Sound

Adjust audio and alert settings.

Volumes: Adjust media, ringtone and alarms volumes
Default notification: Choose alert sound
Touch sounds: On or Off
Screen lock sounds: On or Off

Display

Adjust display settings

Brightness: Adjust screen brightness
Wallpaper: Choose Home Screen background image
Sleep: Adjust screen timeout - 30secs to 30mins
Daydream: Adjust screensaver settings
Font size: Small / Normal / Large / Huge
Accelerometer coordinate system: On or Off
Screen adaption: Auto-adjust screen for certain games
Gravity Sensor Calibration: Reset accelerometer
Wireless display: Enable/disable wireless display settings
Full Screen Mode: On or Off
Smart Color: On or Off
Demo Mode: Enable Smart Color demonstration
Intelligent Backlight: On or Off
Demo Mode: Enable Intelligent Backlight demonstration

Settings

DEVICE

Storage
View and manage your memory.

Internal Storage: Information only
Erase SD card: Delete all data from internal memory

Battery
Monitor battery usage statistics, press for individual settings (app dependent)

Apps
Manage or remove any installed applications. To view available options press on the relevant app from the list.

Downloaded: Displays all non-system apps
On SD Card: Displays pre-installed apps
Running: Displays all current processes
All: Displays all installed apps, including system
⋮ Options: Sort by size / Reset preferences

To uninstall or remove an app, press on the relevant app then click Uninstall.

WARNING
Care should be taken when adjusting app settings, incorrect adjustment could cause apps to stop functioning.

PERSONAL

Location access

Manage services which will try to determine approximate location from sources such as Wi-Fi, location data can improve search results and other services.

Access to my location: On or Off
Wi-Fi & mobile network location: On or Off

Security

Manage and adjust security settings.

Screen lock: None / Slide / Face Unlock / Pattern / PIN / Password
Owner info: Edit text to display on lock screen
Encrypt tablet: Enable data encryption of all tablet data for added security, this will take an hour or more to complete
Make passwords visible: On or Off
Device Administrators: Not adjustable
Unknown sources: On or Off - This enables installation of apps from sources other than Play Store
Verify apps: On or Off
Trusted credentials: Displays when applicable
Install from SD card: Install security certificates when applicable
Clear Credentials: Remove security certificates when applicable

Settings

PERSONAL

Language & input
Adjust language and input methods.

Language: Change language
Spelling correction: On or Off
Personal dictionary: Add or remove words from user dictionary
Speech: Adjust text-to-speech and voice search options
Keyboard & Input Methods: Choose and edit keyboard language and other settings

Backup & reset
Perform data backup to your Google account, and also reset the whole tablet.

Back up my data: On or Off
Backup account: Advanced feature
Automatic restore: Restore app data when reinstalling
Factory data reset: Erases all data and settings from tablet, then restarts in original shipping mode
Recovery Mode: Reboot tablet into recovery mode - Advanced users only

ACCOUNTS

Accounts
Manage and remove user accounts.

+ Add Account: Add user account for email and Google access

SYSTEM

Date & time
Adjust date and time settings.

Automatic date & time: On or Off
Automatic time zone: On or Off
Set date: Adjust date (if not automatic)
Set time: Adjust time (if not automatic)
Select time zone: Adjust time zone
Use 24-hour format: On or Off
Select date format: Adjust date format

Accessibility
Manage accessibility options.

Talkback: Enable spoken feedback for visually impaired
Large text: On or Off
Speak passwords: On or Off
Touch & hold delay: Short / Medium / Long
Quick boot mode: On or Off
High speed mode: On or Off

Developer options
Advanced system options for application development - advanced users only.

About tablet
View system information.

Installing Applications

There are two methods for installing applications (apps)

Method 1
Once the Play Store app has been installed (see Page 13) and you have signed in, apps and games can be downloaded directly from the Play Store.

Method 2
It is also possible to install applications (.apk files) downloaded from alternate sources.

This method will require Unknown Sources to be enabled:
Settings > Security > Device Administration > Unknown Sources

To transfer the application .apk file to your tablet:
- Copy to a Micro SD card using your PC
- Insert Micro SD card into tablet
- Use File Manager to locate the .apk file
- Select the file, installation should begin automatically

Alternatively, transfer the application .apk file to the tablet by connecting directly to your PC, see Page 21 for further details.

WARNING
Certain applications or games may have an age restriction or contain graphic content. Please be aware that any applications/games/video/music downloaded are the responsibility of the owner of the product. Any legal issues arising from downloading such content is not the responsibility of the manufacturer.

Connection to a computer will enable you to copy music, photos and videos from your own collection onto your tablet.

To transfer files to your tablet via USB:

- Connect USB cable from tablet to PC
- The PC should recognise the tablet when connected
- Drag down in the **Notification Area**
- Press USB Connected
- Press Turn on USB storage
- Your tablet will now be available as an external drive on your PC
- Drag and drop your files onto the tablet's drive to transfer
- When finished press Turn off USB storage on tablet to disconnect
- To access the transferred files use the **File Manager** app

NOTE: If a Micro SD card is inserted, this will show as a separate external drive when connected. Files can be transferred to this drive in the same manner.

Basic Functions

Browse the internet

Your tablet is supplied with an internet web browser pre-installed. Once the tablet is connected to Wi-Fi (see Page 12), just find **Browser** in All Apps and press to connect, or use the Search icon on the Home Screen (top left)

Listen to music

To listen to music copied onto your tablet (see Page 21) find the **Music** app in All Apps and press to open, any music files found will show on the player.
It is also possible to play music directly from apps or websites

View photos

To view any photos or pictures copied to your tablet (see Page 21) find the **Gallery** app in All Apps and press to open, any photos or pictures found will show as photo albums.

Watch a film

To view any films or videos copied to your tablet (see Page 21) find the **MX Player** app in All Apps and press to open, any films or videos found will appear on the relevant drive showing.

If you are having problems with your tablet, please try some of the following suggestions.

Not switching on, no sign of power
» Check tablet is charged, when power is connected tablet will show battery symbol briefly.
» Check both mains charger and USB cable individually.

Not charging
» Check all power connections are secure and inserted fully.
» Check both mains charger and USB cable individually.

Picture but no sound
» Check volume level using side and on-screen controls.
» Check using headphones.
» Check using different applications, such as music and video playback.

Wi-Fi network not showing when searching
» Check SSID is not set as “hidden” in router setup.
» Check whilst near to router.
» Check other wireless networks are displaying.
» Consult network administrator if persists.

Not connecting to Wi-Fi network
» Check password is correct.
» Check other equipment connected to network is connecting OK.
» If possible, try on another Wi-Fi network.
» Consult network administrator if persists.

Tablet is slow or unresponsive
» Apps will often download updates automatically, operations may become slow during the update process, leave a few minutes to complete.
» If tablet has become slow or unresponsive try switching Off and back On (long press on power button), this will clear any running apps.
» Disable any widgets running on Home Screen, widgets will use system resources even when not in use.
» Remove any unwanted applications.
» If problem persists try full reset (Settings > Backup & reset > Factory data reset) - this will clear the tablet’s memory and reset back to original settings.

Troubleshooting

Battery life

» Fully charged battery should last around 7-8 hours of constant use, such as watching a film.
» If battery life is reduced, try discharging completely then recharging fully (uninterrupted).

Certain applications not working or working incorrectly

» Certain apps available may not be compatible with this tablet, or may have different requirements: consult app vendor/creator for further advice.
» Try uninstalling and reinstalling the app.

Lost or forgotten passwords

» Reset by clicking on “Forgotten Password”, or log in to your Google account and reset the security settings for your device.

If all else fails, it is recommended to reset the tablet back to the original settings:

Settings > Backup & reset > Factory data reset

WARNING: This will delete all data and reset back to the original state, all original applications will be restored.

Care for your tablet

Keep your tablet clean and free from dirt and dust: use a soft cloth to clean. Never use abrasive or chemical cleaning solutions.

Remember

Your tablet features a plastic screen which should be cared for, when possible keep the screen covered to avoid scratches or damage. Do not allow the screen to be knocked or hit or subject to any heavy weight, twisting or compression.

Customer Support

If you have any problems with your tablet, please contact your retailer for further assistance.

v.3003
Country of origin: China
Supplied by: Racerinter, Spectra House, Edgware, HA8 7EB